

60cm Integrated Dishwasher



FEATURES

14 Place Settings, 8 Wash Programs,
LED Display with Button Controls, Delay Start Function,
Extra Dry Function, Height adjustable Upper Basket,
Slide-out Cutlery Tray

Congratulations on your new InAlto 60cm Integrated Dishwasher!

PROGRAMS



Auto
Auto sensing wash, lightly, or heavily soiled crockery, with or without dried-on food.



Intensive
For heaviest soiled crockery, such as pots, pans, casserole dishes and dishes that have been sitting with dried food on them for some time.



Heavy
For heavily soiled loads, such as pots, plates, glasses and lightly soiled pans.

ECO ECO

For normally soiled loads, such as pots, plates, glasses and lightly soiled pans, standard everyday cycle.



Glass
For lightly soiled crockery and glass.



90 min
For lightly soiled plates and pans that need quick wash.



Rapid
A shorter wash for lightly soiled loads that do not need drying.



Soak
A rinsing cycle so that you can wash your dishes at a later time.

STARTING A WASHING CYCLE

1. Load your dishwasher and add detergent to the detergent dispenser
2. Press the Power button on the control panel to turn on your dishwasher
3. Press the Program button to cycle through the various dishwasher programs, to select your desired wash program. The LED will alight alongside the corresponding program selected.
4. Add any additional options to the wash program such as Delay or Extra Drying.
5. Close the dishwasher door to start the wash program, using the settings you've selected.

Note: For more Operational Instructions, refer to Page 20–21 of your User Manual.

DETAILS

Dimensions (W, D, H mm): 598 × 550 × 815
Warranty: 3 Years (2 + 1 on registration)

SUPPORT

Telephone: 1300 11 4357
Email: support@residentiagroup.com.au