

60cm Single Dishwasher Drawer



FEATURES

7 Place Settings, 7 Wash Programs,
LED Display with Button Controls, Delay Start Function,
Extra Dry Function, Dry & Fresh Option, Cutlery Basket,
Quiet 47 dBA operation, Child Lock

Congratulations on your new InAlto 60cm Single Dishwasher Drawer!

INSTALLATION

- **Preparing the cavity:** The cavity will need to conform with the dimension in the diagram of page 11 of the user manual. The water supply and power point of the appliance cannot be in the dishwasher cavity.
- **Fit the mounting brackets:** Dishwasher Drawers are unstable until they are secured to their surrounding cabinetry.
- **The dishwasher must be level for proper dish rack operation and wash performance.** If needed, adjust the feet on each corner to ensure the appliance sits evenly on the floor.
- **For a complete guide, refer to the Installation Instructions in the user manual, pages 10-15.**


CLEANING THE FILTER SYSTEM

The filter system at the base of the dishwasher cabinet traps coarse debris from the washing cycle. The debris over time may cause the filters to clog. We recommend that you clean this regularly under running water to ensure optimal performance of your dishwasher wash cycles.

For a more detailed guide and other care tips, refer to the Maintenance & Cleaning section of your user manual, pages 31-34.

DETAILS

Dimensions (W, D, H mm): 595 × 570 × 415
Warranty: 2 Years

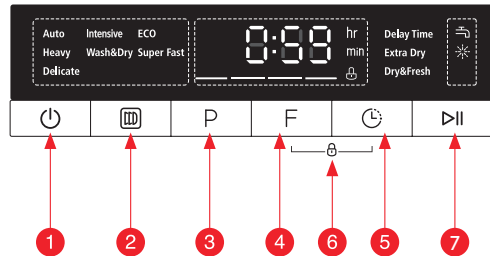

THE CONTROLS

Your Dishwasher Drawer Controls

- 1 Power**
- 2 Dry & Fresh**
When selecting this option, it will run at the end of the washing cycle. To run it immediately, hold the button **Option** button for 3 seconds.
- 3 Program Selector**
- 4 Function Selector**
- 5 Delay Start**
Press this button to add a delay start time in one-hour increments up to 24 hours.
- 6 Child Lock**
Pressing this button combination will lock the control panel. Only the **Power** button will remain active.
- 7 Start/Pause**

SUPPORT

Telephone: 1300 11 4357
Email: support@residentiagroup.com.au